
Changing / resetting Wi-Fi Direct SSID and password

Troubleshooting · https://manual.blackvue.com/docs/dr770x/troubleshooting/changing-resetting-wi-fi-direct-ssid-and-password/

The dashcam's Wi-Fi SSID and password can be changed using on of the following methods.

Change Wi-Fi SSID and password over the Cloud

1. Login to the BlackVue app.
2. Select **Camera** on the Navigation Bar.
3. Tap your dashcam model in the camera list.
4. Select **Cloud** in the connection toggle button.

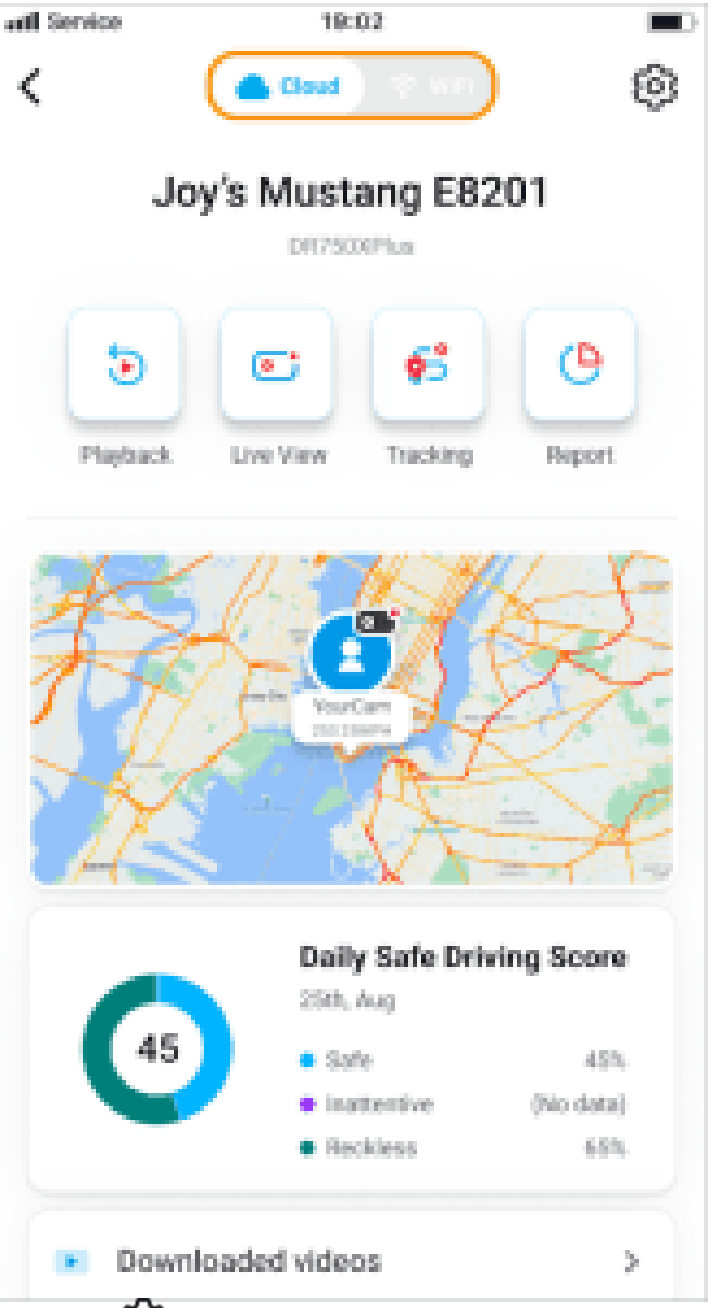


2. Press ⚙.

Note

- You can access FW settings Over the Cloud only when the dashcam is ON and connected to the internet (Cloud).

3. Select **Camera connectivity** > **Camera Wi-Fi credentials.** You can change the camera's SSID and Wi-Fi login password.

4. Go back to the Firmware settings menu, tap ‹ and tap **Save**.

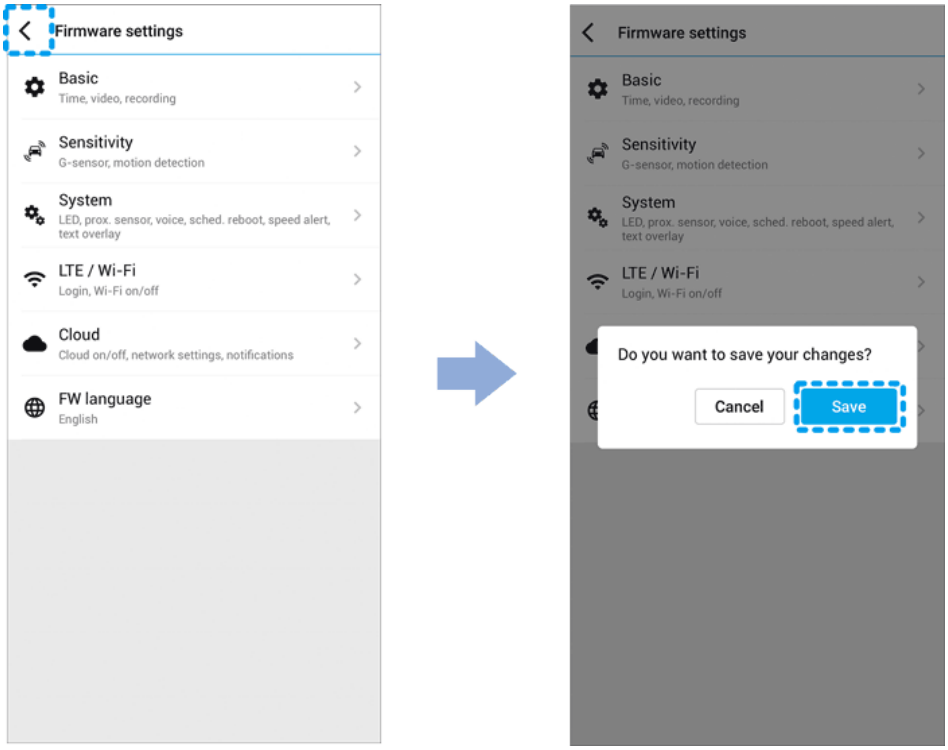

Change the Wi-Fi password using BlackVue Viewer (Windows/macOS)

1. Remove the microSD card from the dashcam.
2. Insert the card into the microSD card reader and connect it to a computer.
3. Launch BlackVue Viewer.

*You can download **BlackVue Viewer** from **www.blackvue.com** > **Support** > **Downloads** and install it on your computer.

4. In BlackVue Viewer click on the Settings button to open the BlackVue settings panel.
5. Click the **Firmware tab**, then the **Camera connectivity** tab and under **Camera Wi-Fi credentials** change the password.
6. Click **Save and close.**