
External connectivity module (Optional) – DR750X-2CH

Optional accessories · https://manual.blackvue.com/docs/dr750x-2ch/optional-accessories/external-connectivity-module-optional-dr750x-2ch/

To stay connected to the BlackVue Cloud over cellular data network, you can install an external connectivity module (such as BlackVue Connectivity Module (CM100LTE)).

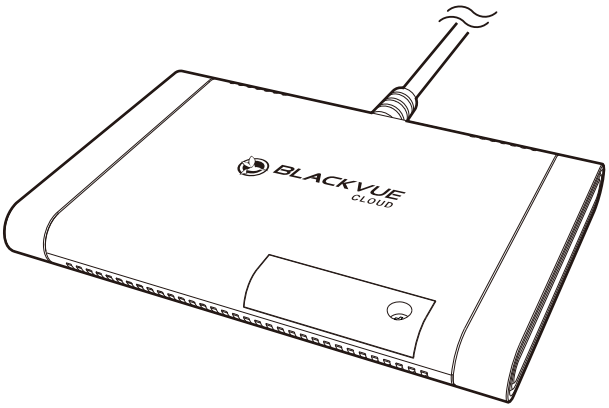

Note

- You must subscribe to your recommended local network carrier for LTE services.
- You must subscribe to BlackVue Cloud services.
- BlackVue Connectivity Module (CM100LTE) may not be supported in some countries. Please refer to BlackVue website to see availability.