ELITE 8 Tamper Proof Installation Guide (Sold Seperately)

Installation · https://manual.blackvue.com/docs/tpe/installation/https-manual-blackvue-com-docs-tpe/

BlackVue Tamper Proof (TP-E) Installation Guide


Step-by-Step Installation

Step 1. Unplug cables and remove the dashcam from the windshield

- If the dashcam is installed on the windshield, unplug all cables and remove the dashcam with mount.


Step 2. Remove the mount from the front camera

- Press the LOCK button and pull the dashcam out of its mounting bracket.

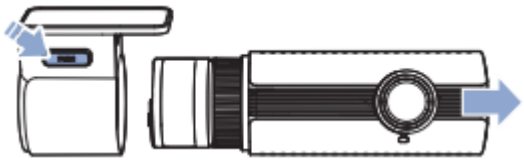


Step 3. Slide into the dashcam with left piece

- Slide the Tamper proof bracket (Left piece) into the dashcam until it “Clicks”.

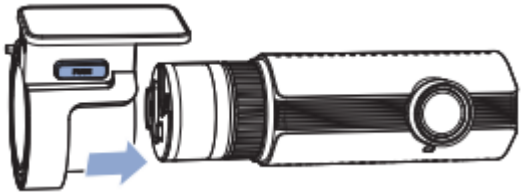

Step 4. Plug in all dashcam cables and align with right piece

- Plug in all dashcam cables. Align the right piece with the Tamper proof bracket (Left piece).
    - The right piece is printed with the BlackVue logo.

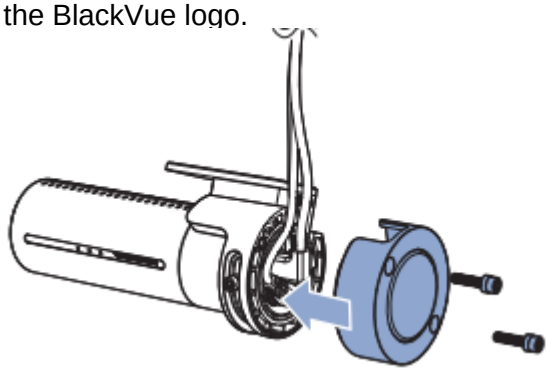


Step 5. Combine all the pieces together and tighten via screws

- Push the two pieces together and use the Allen wrench to tighten the two screws.

Step 6. Install the dashcam on the windshield and tighten via screw

- Install the dashcam on the windshield at a suitable angle and tighten the screw into the Tamper proof bracket (Left piece).

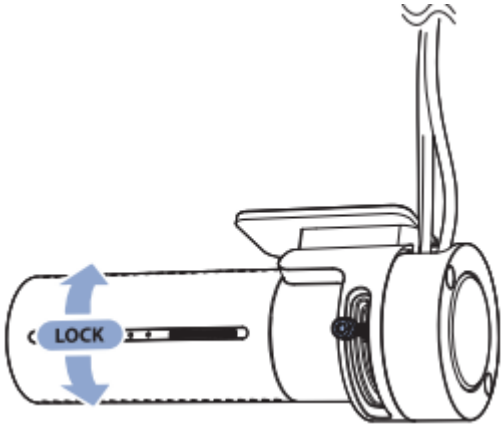
LOCK